

Quick Start Guide

Sony MiniDVD Camcorder



Initial Setup

- 1 Insert battery into external compartment on rear of camcorder
- 2 Slide the OPEN - ACCESS switch on top of camcorder and wait for the DVD door to open. Insert DVD and close door.
- 3 Slide the LENS COVER switch on front of camcorder to OPEN



Getting Up and Running

- 4 Turn camera ON by pushing the small green button on the POWER dial and rotating knob to ON
- 5 Open LCD display to view your picture.




Recording Video

- 6 ZOOM in or out by adjusting the "W - T" zoom tab located on top of camcorder
- 7 Push the START/STOP button on rear of camcorder to start recording. **REC** should appear at the top of your LCD display.
- 8 Push the START/STOP button again to **pause** or **resume** recording.



Playing Back Your Recording

- 9 With the camcorder on pause (**STBY**), press the **PLAY** button in the lower left-hand corner of the touch-screen LCD display:
- 10 Touch the image of the video that you'd like to play.
- 11 Use the on-screen buttons to fast forward, rewind, play and pause your recording.
- 12 If necessary, press the **HOME** button  to bring up additional menu options. Adjust settings by using the touch-screen LCD display.



Quick Start Guide



Sony MiniDVD Camcorder



Finalizing Your Recording

13 In order to watch your DVD on other players and devices, you must finalize the disc. Once the disc is finalized, you can no longer record to it.

14 To finalize your recording, simply follow the steps listed below:

- Place your camcorder in a stable position and connect the AC Adaptor / Power Cable to the DC IN jack
- Turn on the power by rotating the POWER switch to ON
- Insert the disc that you want to finalize
- Open the LCD display and press the HOME button 
- Touch the MANAGE DISC/MEMORY icon at the bottom of your LCD display 
- Touch the FINALIZE button on the screen. Touch YES and wait for finalizing to complete.



NOTE: Do not apply shock or vibration to the camcorder while it's finalizing. When you need to disconnect the AC Adaptor, make sure that the camcorder is turned off.

Powering Off

15 When your disc is finalized, you can remove it from the camcorder, close the LCD display and rotate the POWER dial to OFF

16 To charge the battery, connect the AC Adaptor / Power Cable to the DC IN jack with the battery still in place.

If you encounter any problems whatsoever, please call us at 1-877-633-8866. We're more than happy to help!